




Metal Building Curb Installation Instructions

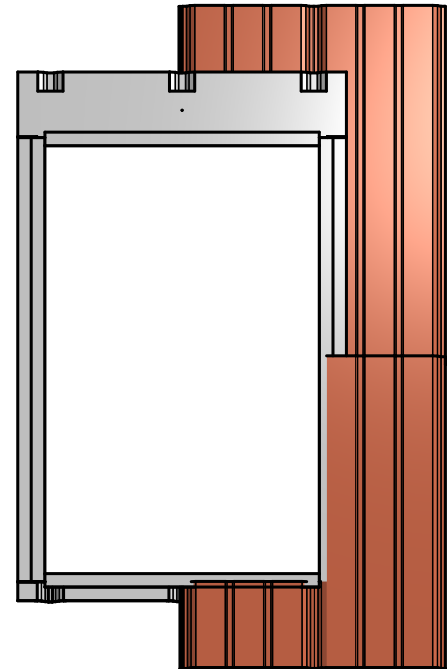

CURBCO

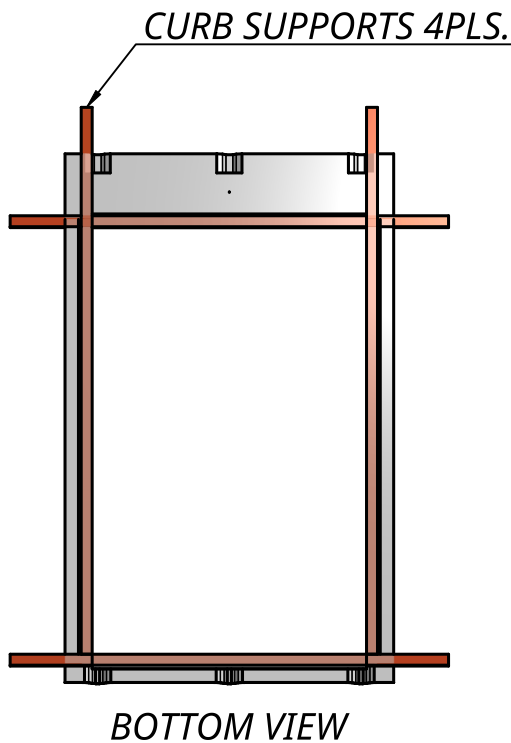

Up hill side of curb goes underneath roof panels

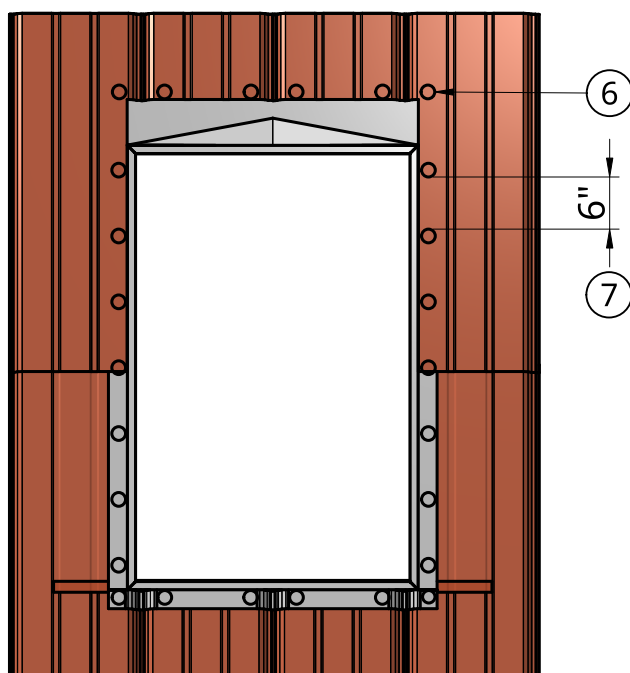

Down hill side of curb goes over the top of roof panels

TOP VIEW

- 1) Locate roof opening & install curb supports
- 2) Install curb in support framing
- 3) Cur roof panels to fit tightly around curb sides & within 3" of water diverter
- 4) Install a double line of tape sealant around curb & press panels into place
- 5) Fasten roof panel through the curb & support with the same fasteners used on the roof
- 6) Use #12 self tapping tek screw for fasteners
- 7) Four fasteners minimum per side or 6" minimum spacing
- 8) Apply a butal sealant on all sides of the curbs as it meets the panel